




⚠ CAUTION:
 Turn off both water valves (hot and cold) before disconnecting hoses. Failure to follow these instructions may result in water leakage and/or possible injury from hot water.

If an incompatibility is caused by insufficient water pressure, to increase water flow for certain washing machine models, a "Y" adapter (available at most hardware stores) may be used. Turn water off at the valves and disconnect the HOT water hose (at the valve). Connect the "Y" adapter to the OUTLET on your LaundryPure, then connect both the HOT and COLD hoses from your washer to the "Y" adapter (see diagram below). Operate your washer on the Warm/Warm setting (your LaundryPure will still be using just cold water).

⚠ CAUTION:
 When connecting or disconnecting hoses, hold the threaded connector on your LaundryPure with pliers while turning the hose connector. Failure to follow these instructions may result in damage to your appliance.

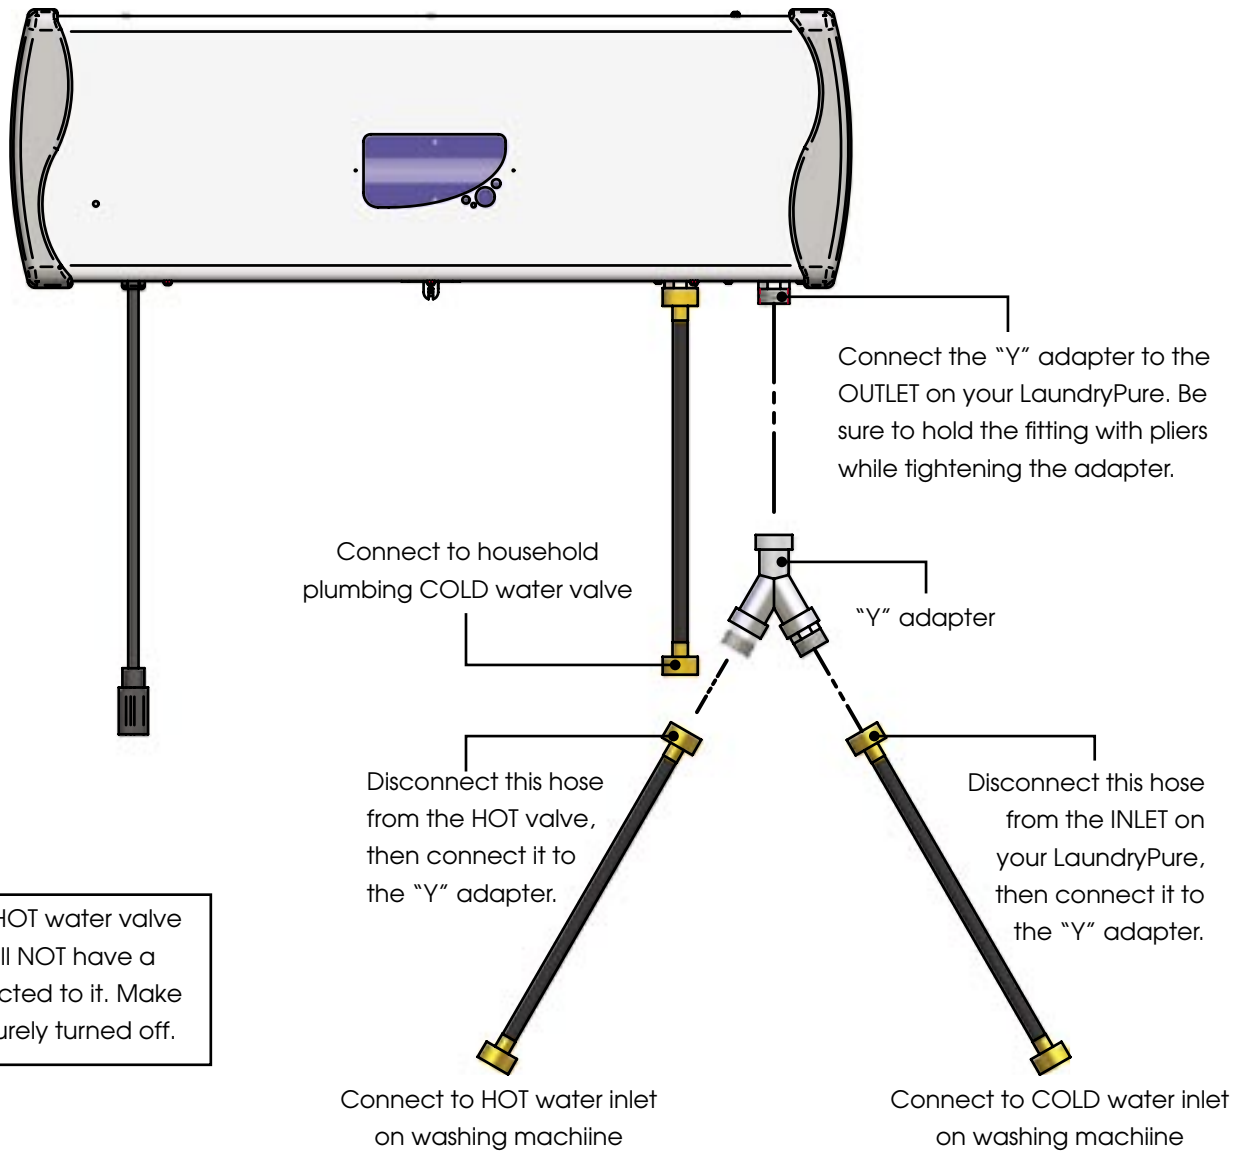

NOTE: Your HOT water valve plumbing will NOT have a hose connected to it. Make sure it is securely turned off.